


Parallel Flush Mount Wall Plate 2 ports Installing Instruction



Stripper, Punch down tool.



T568B		T568A	
Pin 1	White / Orange	Pin 1	White / Green
Pin 2	Orange	Pin 2	Green
Pin 3	White / Green	Pin 3	White / Orange
Pin 4	Blue	Pin 4	Blue
Pin 5	White / Blue	Pin 5	White / Blue
Pin 6	Green	Pin 6	Orange
Pin 7	White / Brown	Pin 7	White / Brown
Pin 8	Brown	Pin 8	Brown

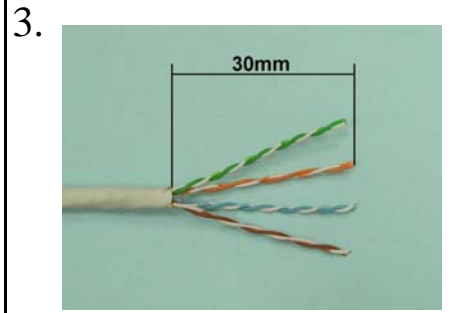

To strip the PVC Jacket in 30mm, and separate to 4 pair each.



Flush mount wall plate contain housing, module & central small plate.



Separate frame from base housing.



Follow the direction on the color coding to position T568B or T568A wiring, separate a little space on proper position and insert the 4 pair wires into the slot, **then keep the twist as near IDC as possible.**



Use a punch down tool to complete the termination and cut off any access wire.



Put frame on base housing again.



Push down central cover.